



DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date 16-maalis-23
Pattern Type
Pattern Difficulty
Pattern Designer
Pattern Volume (ml) 20,45

Surface Information

Surface Type Synthetic
Surface Brand
Age

Pattern Parameters

Pattern Number
Pattern Name Carbo kevät
Mode Clean & Oil
Forward Speed Quick Clean
Start Cleaner Spray 0
Start Squeegee 0
Start Oiling 6
Split Pattern


Supplies Information

Lane Cleaner Judge
Cleaner Mixture Ratio 6 : 1
Cleaner Transition Distance Authority22
Cleaner Spray End Distance 54 Envoy
Lane Conditioner

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio, Zone Volume (ml)).

Table with 8 rows (ZONE 1-8) and 30 columns (7 Pin Side, Board Number, 10 Pin Side).

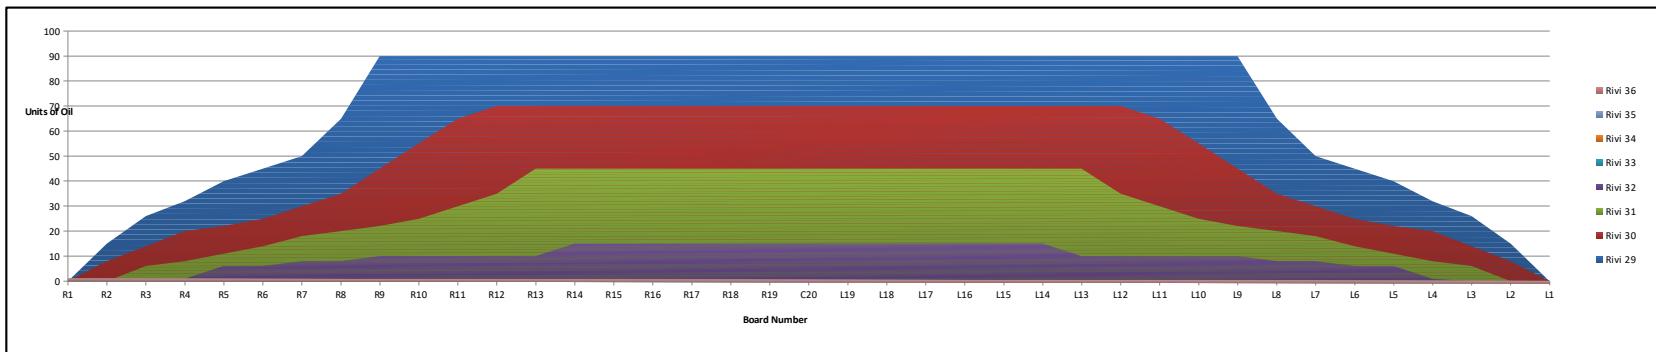



## Carbo kevät

### Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 38,6	2,3	3L-7L	Left = 0,0	#JAKO/0!
3R-7R	Right= 38,6	2,3	3R-7R	Right= 0,0	#JAKO/0!
18L-18R	Center = 90,0		18L-18R	Center= 0,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 22,2	3,1	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 22,2	3,1	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 70,0		18L-18R	Center= #JAKO/0!	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 11,4	3,9	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 11,4	3,9	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center= 45,0		18L-18R	Center = #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 4,2	3,5	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right= 4,2	3,5	3R-7R	Right= #JAKO/0!	#JAKO/0!
18L-18R	Center = 15,0		18L-18R	Center= #JAKO/0!	

### Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,162	2,3	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,162	2,3	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,377		18L-18R	Center= 0,000	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,065	3,1	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,065	3,1	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,205		18L-18R	Center= 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,033	3,9	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,033	3,9	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center= 0,132		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,012	3,7	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right= 0,012	3,7	3R-7R	Right= 0,000	#JAKO/0!
18L-18R	Center = 0,044		18L-18R	Center= 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

