



DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date, Pattern Type, Pattern Difficulty, Pattern Designer: JKH, Pattern Volume (ml): 20,95

Surface Information

Surface Type: Synthetic, Surface Brand, Age

Pattern Parameters

Pattern Number, Pattern Name: Carbo 2017, Mode: Clean & Oil, Forward Speed: Quick Clean, Start Cleaner Spray: 0, Start Squeegee: 0, Start Oiling: 6, Split Pattern


Supplies Information

Lane Cleaner: Judge, Cleaner Mixture Ratio: 6 : 1, Cleaner Transition Distance: Authority22, Cleaner Spray End Distance: 52 Envoy, Lane Conditioner: DEFY

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio L/R, Zone Volume (ml)).

Pin distribution table with columns for 7 Pin Side, Board Number, and 10 Pin Side, and rows for Zones 1-8.

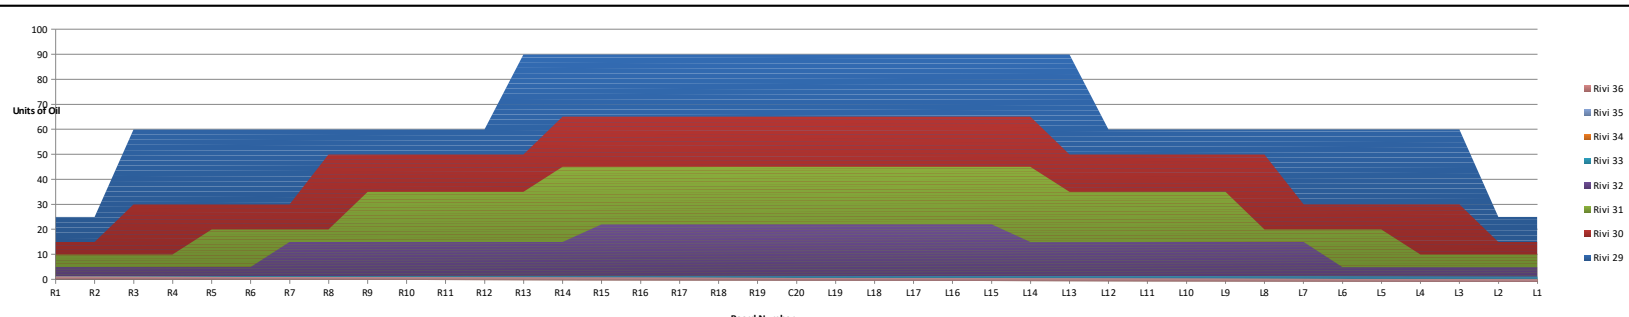



Carbo 2017

Crosswise Ratios (by units)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 60,0	1,5	3L-7L	Left = 1,0	1,0
3R-7R	Right = 60,0	1,5	3R-7R	Right = 1,0	1,0
18L-18R	Center = 90,0		18L-18R	Center = 1,0	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 30,0	2,1	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 30,0	2,1	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 65,0		18L-18R	Center = #JAKO/0!	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 16,0	2,8	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 16,0	2,8	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 45,0		18L-18R	Center = #JAKO/0!	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 7,0	3,1	3L-7L	Left = #JAKO/0!	#JAKO/0!
3R-7R	Right = 7,0	3,1	3R-7R	Right = #JAKO/0!	#JAKO/0!
18L-18R	Center = 22,0		18L-18R	Center = #JAKO/0!	

Crosswise Ratios (by ml)

Zone 1			Zone 5		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,251	1,5	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,251	1,5	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,377		18L-18R	Center = 0,000	
Zone 2			Zone 6		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,088	2,1	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,088	2,1	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,191		18L-18R	Center = 0,000	
Zone 3			Zone 7		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,040	2,8	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,040	2,8	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,113		18L-18R	Center = 0,000	
Zone 4			Zone 8		
	Average	Ratio		Average	Ratio
3L-7L	Left = 0,021	3,1	3L-7L	Left = 0,000	#JAKO/0!
3R-7R	Right = 0,021	3,1	3R-7R	Right = 0,000	#JAKO/0!
18L-18R	Center = 0,065		18L-18R	Center = 0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

