



DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date 17-joulu-23, Pattern Type, Pattern Difficulty, Pattern Designer jkl, Pattern Volume (ml) 23,43

Surface Information

Surface Type Synthetic, Surface Brand Brunswick Pro Lane, Age 16

Pattern Parameters

Pattern Number, Pattern Name Unelma 2024, Mode Clean & Oil, Forward Speed Quick Clean, Start Cleaner Spray 0, Start Squeegee 0, Start Oiling 6, Split Pattern


Supplies Information

Lane Cleaner Judge, Cleaner Mixture Ratio 6 : 1, Cleaner Transition Distance Authority22, Cleaner Spray End Distance 52 Envoy, Lane Conditioner hp209hv

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio L/R, Zone Volume (ml)).

Table with 7 Pin Side, Board Number, and 10 Pin Side columns, containing numerical data for zones 1-8.

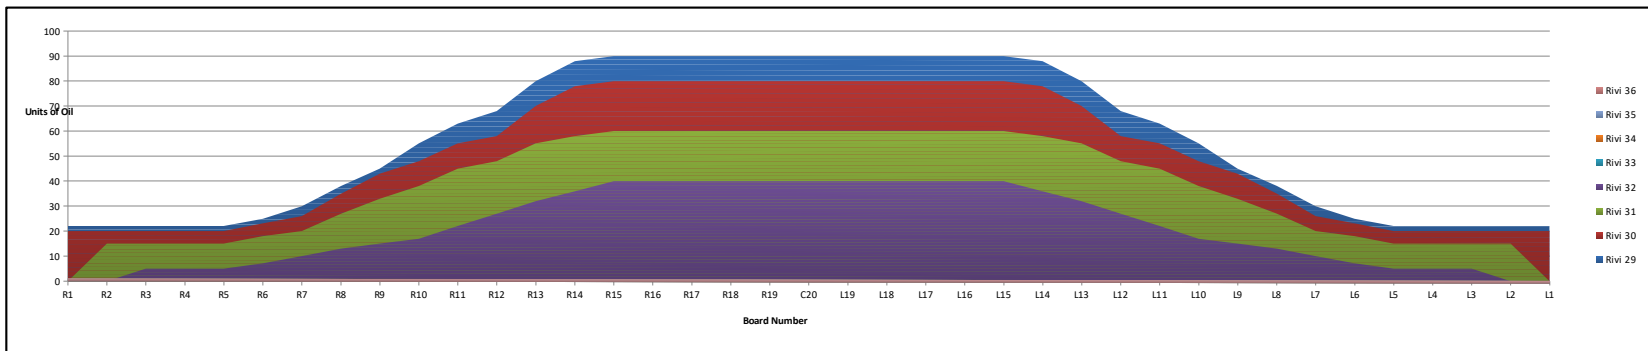



Unelma 2024

Crosswise Ratios (by units)

| Zone 1 | | | Zone 5 | | |
|---------|---------------|-------|---------|------------------|----------|
| | Average | Ratio | | Average | Ratio |
| 3L-7L | Left = 24,2 | 3,7 | 3L-7L | Left = 0,0 | #JAKO/0! |
| 3R-7R | Right= 24,2 | 3,7 | 3R-7R | Right= 0,0 | #JAKO/0! |
| 18L-18R | Center= 90,0 | | 18L-18R | Center= 0,0 | |
| Zone 2 | | | Zone 6 | | |
| | Average | Ratio | | Average | Ratio |
| 3L-7L | Left = 21,8 | 3,6 | 3L-7L | Left = #JAKO/0! | #JAKO/0! |
| 3R-7R | Right= 21,8 | 3,6 | 3R-7R | Right= #JAKO/0! | #JAKO/0! |
| 18L-18R | Center= 80,0 | | 18L-18R | Center= #JAKO/0! | |
| Zone 3 | | | Zone 7 | | |
| | Average | Ratio | | Average | Ratio |
| 3L-7L | Left = 16,6 | 3,6 | 3L-7L | Left = #JAKO/0! | #JAKO/0! |
| 3R-7R | Right= 16,6 | 3,6 | 3R-7R | Right= #JAKO/0! | #JAKO/0! |
| 18L-18R | Center= 60,0 | | 18L-18R | Center= #JAKO/0! | |
| Zone 4 | | | Zone 8 | | |
| | Average | Ratio | | Average | Ratio |
| 3L-7L | Left = 6,4 | 6,2 | 3L-7L | Left = #JAKO/0! | #JAKO/0! |
| 3R-7R | Right= 6,4 | 6,2 | 3R-7R | Right= #JAKO/0! | #JAKO/0! |
| 18L-18R | Center = 40,0 | | 18L-18R | Center= #JAKO/0! | |

Crosswise Ratios (by ml)

| Zone 1 | | | Zone 5 | | |
|---------|----------------|-------|---------|----------------|----------|
| | Average | Ratio | | Average | Ratio |
| 3L-7L | Left = 0,101 | 3,7 | 3L-7L | Left = 0,000 | #JAKO/0! |
| 3R-7R | Right= 0,101 | 3,7 | 3R-7R | Right= 0,000 | #JAKO/0! |
| 18L-18R | Center = 0,377 | | 18L-18R | Center= 0,000 | |
| Zone 2 | | | Zone 6 | | |
| | Average | Ratio | | Average | Ratio |
| 3L-7L | Left = 0,073 | 3,6 | 3L-7L | Left = 0,000 | #JAKO/0! |
| 3R-7R | Right= 0,073 | 3,6 | 3R-7R | Right= 0,000 | #JAKO/0! |
| 18L-18R | Center= 0,268 | | 18L-18R | Center= 0,000 | |
| Zone 3 | | | Zone 7 | | |
| | Average | Ratio | | Average | Ratio |
| 3L-7L | Left = 0,056 | 3,6 | 3L-7L | Left = 0,000 | #JAKO/0! |
| 3R-7R | Right= 0,056 | 3,6 | 3R-7R | Right= 0,000 | #JAKO/0! |
| 18L-18R | Center= 0,201 | | 18L-18R | Center = 0,000 | |
| Zone 4 | | | Zone 8 | | |
| | Average | Ratio | | Average | Ratio |
| 3L-7L | Left = 0,021 | 6,2 | 3L-7L | Left = 0,000 | #JAKO/0! |
| 3R-7R | Right= 0,021 | 6,2 | 3R-7R | Right= 0,000 | #JAKO/0! |
| 18L-18R | Center = 0,134 | | 18L-18R | Center= 0,000 | |

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

